

The Five Pillars Of Safety  
In Healthcare

**Appendix**

PathO3Gen Solutions™

## Appendix

Page

---

53	PathO3Gen Solutions Footwear Sanitizing Station	3
54	Assessment of PathO3Gen Solutions Footwear Sanitizing Station for Decontaminating Hard, Non-Porous Environmental Surfaces (Shoes)	4
55	PathO3Gen Solutions	11
56	Efficacy of an Ozone-Generating Whole-Shoe Disinfection Device at Three Time Points	13





## Coronavirus Study Summary

### General Details

**Study title:** Assessment of PathO3Gen Solutions Footwear Sanitizing Station for Decontaminating Hard, Non-Porous Environmental Surfaces (Shoes)

**Organism tested:** Coronavirus 229E (ATCC VR-740) - Human Coronavirus

**Performing laboratory:** CREM Co. Labs, Ontario, Canada

**Date Performed:** March 20th, 2020

### Summary

The initial challenge on each carrier in **Test 1** was 3.68 log 10. The PathO3Gen Solutions' Footwear Sanitizing Station achieved the maximum attainable result of 3.68 log 10 at both 8 and 10 seconds, leaving behind zero plaque. Similarly, the initial challenge on each carrier in **Test 2** was 3.73 log 10, and the PathO3Gen Solutions FSS also achieved the maximum attainable result at both 8 and 10 seconds leaving zero plaque behind. Lastly, the initial challenge on each carrier in **Test 3** was 3.65 log 10, and the FSS also achieved the maximum attainable result at both 8 and 10 seconds leaving zero plaque behind.

Overall, the results were as follows:

6 seconds: 1 PFU remaining (PFU = Plaque forming unit = pathogen)

8 seconds: 0 PFU remaining

10 seconds: 0 PFU remaining

### Concluding statement

"The PathO3Gen Solutions' Footwear Sanitizing Station left 0 Human Coronavirus residue on the bottom of footwear, in 8 seconds."

Study No.: PTGS200219-01

Modified Quantitative Disk Carrier Test Method to  
Determine the Virucidal Activity of an Ozone-  
Generating Whole-Shoe Disinfection Device**STUDY TITLE**

Assessment of PathO3Gen Solutions™ Footwear Sanitizing Station for Decontaminating Hard,  
Non-Porous Environmental Surfaces: Testing against Human Respiratory Coronavirus 229E  
(ATCC VR-740) as a representative Healthcare-Associated Pathogen

**TEST ORGANISM**

*Coronavirus 229E (ATCC VR-740)*

**TEST SAMPLE IDENTITY**

PathO3Gen Solutions™ Footwear Sanitizing Station

**TEST Method**

Modified Quantitative Disk Carrier Test Method (ASTM 2197) to Determine the Virucidal Activity of  
an Ozone-Generating Whole-Shoe Disinfection Device

**AUTHOR**

Dr. Syed A. Sattar  
Study Director

**STUDY COMPLETION DATE**

March 20, 2020

**PERFORMING LABORATORY**

CREM Co. Labs. Units 1-2, 3403 American Dr., Mississauga, Ontario, Canada L4V 1T4

**SPONSOR**

PathO3Gen Solutions™

**STUDY NUMBER**

PTGS200219-01

Study No.: PTGS200219-01

Modified Quantitative Disk Carrier Test Method to  
Determine the Virucidal Activity of an Ozone-  
Generating Whole-Shoe Disinfection Device

### STUDY PERSONNEL

STUDY DIRECTOR: Syed A. Sattar, PhD

PROFESSIONAL PERSONNEL INVOLVED: Bahram Zargar, PhD  
Sepideh Khoshnevis, MSC.

Study No.: PTGS200219-01

Modified Quantitative Disk Carrier Test Method to  
Determine the Virucidal Activity of an Ozone-  
Generating Whole-Shoe Disinfection Device

## TEST SYSTEM

### 1. Test Microorganism

Coronavirus 229E (ATCC VR-740): Coronavirus 229E (ATCC VR-740) is an enveloped virus in the genus Coronavirus. Members of this genus can cause acute respiratory infections such as SARS-1 and SARS-2 (19-nCoV). Unlike Coronavirus 229E, SARS-1, SARS-2 and Middle-East Respiratory Syndrome (MERS) virus require Biosafety Level 3 labs. Therefore, Coronavirus 229E is frequently used as surrogate for them to assess the activity of different technologies for infection prevention and control (IPAC).

### 2. Host Cell Line

L-132 cells were used as hosts to support the replication and quantitation of 229E.

The cells were seeded into 12-well multi-well cell culture plates containing modified Eagle's medium (MEM) supplemented with 10% fetal bovine serum (FBS) and maintained at  $36\pm 1^{\circ}\text{C}$  in a humidified atmosphere of 5%  $\text{CO}_2$ . Efficacy test was performed when the cell monolayer reached >90% confluency.

### 3. Preparation of Test Inocula

To prepare the virus for inoculation, the virus stock was mixed directly with the soil load (5% FBS). Dilution of the mixture was prepared using Earle's balanced salt solution (EBSS; pH 7.2-7.4).

## TEST METHOD

### 1. Preparation of Test Substance

The efficacy tests were performed on PathO3Gen Solutions™ Footwear Sanitizing Station following the instruction in the device's user manual at three exposure times (6, 8 and 10 seconds).

### 2. Test Procedure

A quantitative test system to closely simulate the field-application of the environmental surface decontamination process (modified quantitative carrier test – Tier 2 or QCT-2 (ASTM 2197)) was applied. The protocol was adapted to test the UV LED-based technology. Disks (2 cm diameter) from croc sole shoe were used as archetypical environmental surfaces. Sterile disks were placed on a small platform which was the same size of a shoe at three different positions (middle, back and front). The platform was taped at the bottom of the shoe. The platforms with the disks were exposed to the UV without touching the glass cover of the device. The disks were retrieved in an eluent/neutralizer immediately at the end of the exposure time. The disks were then eluted and the eluates assayed for viable virus.

Each disk on the platform was contaminated with 20  $\mu\text{L}$  of the virus inoculum with a soil

Study No.: PTGS200219-01

Modified Quantitative Disk Carrier Test Method to  
Determine the Virucidal Activity of an Ozone-  
Generating Whole-Shoe Disinfection Device

## Experimental Design

### a) Input

The stock virus utilized in the testing was titrated by 10-fold serial dilutions and plaque assayed for infectivity to determine the starting titer of the virus. The results of this control were for informational purposes only.

### b) Cytotoxicity Control

Prior to the test, cytotoxicity control and control for interference with virus infectivity were performed to determine if the shoe material caused any apparent degeneration (cytotoxicity) of the host cell line. Control monolayers received an equivalent volume of EBSS (without any neutralizer) only.

### c) Efficacy Test

1. Disks (2 cm diameter) from croc sole shoes were used in testing of this method, 3 disks were assessed as control without exposure to UV.
2. Disks were left inside an operating BSC to dry.
3. Disks were inserted on a platform with the same size of the shoe at three different locations (front, middle and back).
4. The platform was taped to the bottom of a shoe.
5. The experimenter put on the shoes with the platforms at their bottom.
6. The experimenter stepped on the device which was already on for 10 minutes.
7. After the specific exposure time, the experimenters stepped out of the device.
8. The disks were removed from the platform and each disk was placed into a Nalgene vial containing 2 mL of an eluent.
9. The L-132 cells in multi-well culture plates were inoculated with 100  $\mu$ L of the dilutions prepared from test and control samples. Uninfected indicator cell cultures (cell controls) were inoculated with 100  $\mu$ L EBSS alone. The cultures were incubated at  $33\pm 1^\circ\text{C}$  in a humidified atmosphere of 5%  $\text{CO}_2$  for 40-44 hrs before fixing and staining them for counting the plaque-forming units (PFU).
10. Three control disks were included in each test to estimate the initial contamination on the platform. The test was initiated with processing one control before the processing test carriers, one in the middle of the test and ended up with the third control. This was done to take into account the changes in the input level of the test organisms during the experiment.

## DATA ANALYSIS

### Calculation of $\text{Log}_{10}$ Reduction

$\text{Log}_{10}$  Reduction =  $\text{Log}_{10}$  of average PFU from control carriers –  $\text{log}_{10}$  of average PFU the test carriers.



Study No.: PTGS200219-01

Modified Quantitative Disk Carrier Test Method to  
Determine the Virucidal Activity of an Ozone-  
Generating Whole-Shoe Disinfection Device

### TEST RESULTS

The initial challenge on each carrier were 3.68, 3.73 and 3.65 log<sub>10</sub> PFU in three different tests performed on PathO3Gen Solutions™ Footwear Sanitizing Station. Table 1 show the result of log<sub>10</sub> reduction for each contact time. In this test, the drying time of inoculated disks was reduced to 1 hr. In all contact times the log<sub>10</sub> reduction was more than 3. No plaque was detected for 8 and 10 seconds contact times.

Table 1: Virucidal Activity Test of PathO3Gen Solutions™ Footwear Sanitizing Station against Coronavirus 229E (ATCC VR-740) with three different contact times

Contact times	Log <sub>10</sub> Reduction in PFU			
	Test #1	Test #2	Test #3	Average of Three tests
6 seconds	3.07	3.28	3.42	3.27
8 seconds	3.68	3.73	3.65	3.69
10 seconds	3.68	3.73	3.65	3.69

Study No.: PTGS200219-01

Modified Quantitative Disk Carrier Test Method to  
Determine the Virucidal Activity of an Ozone-  
Generating Whole-Shoe Disinfection Device**APPENDIX**

Result of efficacy test on the device with three different contact times (6, 8 and 10 seconds) against Coronavirus 229E dried on carriers representing shoe soles.

Test #1												
Contact Time	6 seconds			8 seconds			10 seconds			Control		
Dilution	Front	Middle	Back	Front	Middle	Back	Front	Middle	Back	C1	C2	C3
10 <sup>0</sup>	0,1,0	1,1,0	0,1,1	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	TNTC	TNTC	TNTC
10 <sup>-1</sup>	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	21,16,25	25,24,25	11,16,23
10 <sup>-2</sup>	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	3,3,3	2,2,2	2,2,2
10 <sup>-3</sup>	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0
10 <sup>-4</sup>	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0

C= Control

TNTC= Too numerous to count

Test #2												
Contact Time	6 seconds			8 seconds			10 seconds			Control		
Dilution	Front	Middle	Back	Front	Middle	Back	Front	Middle	Back	C1	C2	C3
10 <sup>0</sup>	0,1,1	1,0,0	1,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	TNTC	TNTC	TNTC
10 <sup>-1</sup>	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	24,25,25	21,22,24	24,20,25
10 <sup>-2</sup>	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	4,3,2	3,2,4	3,3,4
10 <sup>-3</sup>	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0
10 <sup>-4</sup>	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0

Test #3												
Contact Time	6 seconds			8 seconds			10 seconds			Control		
Dilution	Front	Middle	Back	Front	Middle	Back	Front	Middle	Back	C1	C2	C3
10 <sup>0</sup>	0,0,0	0,1,0	0,1,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	TNTC	TNTC	TNTC
10 <sup>-1</sup>	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	20,22,22	25,25,17	21,19,19
10 <sup>-2</sup>	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	2,2,2	2,2,4	3,2,2
10 <sup>-3</sup>	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0
10 <sup>-4</sup>	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0	0,0,0

The use of the CREM Co. Labs' name, logo or any other representation of CREM Co. Labs without the written approval of CREM Co., Inc. is prohibited. In addition, CREM Co Labs may not be referred to any form of promotional materials, press release, advertising or similar materials (whether by print, broadcast, communication or electronic means) without the expressed written permission of CREM Co., Inc.

PathO<sub>3</sub>Gen Solutions is another strategic partner to Crothall Healthcare. They imagine a world where the number of deaths due to preventable, life-threatening infections are significantly reduced with the use of their unique patented Ozone + UVC Footwear Sanitizing Station. NSF Labs in Ann Arbor, Michigan performed an independent study and found that the Footwear Sanitizing Stations eliminated up to 99.999% of deadly infection-causing pathogens on the bottom of footwear in seconds including but not limited to Methicillin-resistant staphylococcus aureus (MRSA), Candida auris and Clostridium difficile (C.diff). In another independent study completed by CREM Co. Labs in Ontario, Canada, the Footwear Sanitizing Station completely eliminated Coronavirus in eight (8) seconds.

Nine of their Footwear Sanitizing Stations are installed at AdventHealth Connerton located in Land O' Lakes, FL. They were under-going construction and saw a 34% reduction in infections from February 2019 – July 2019. They updated their HAI rate graphs and the reduction that they experienced since February 2019 (Footwear Sanitizing Stations implementation date) is 53% through March 2020. They have always had a lower than expected HAI rate at their facility. However, since the inception of the Footwear Sanitizing Stations and other infection control measures, they have reduced their rate by 53%.

An employee satisfaction survey resulted in a 92% overall satisfaction rate. Nurses feel comfortable taking their shoes home after stepping on the stations and the public feels safer for their loved ones in the hospital. Debi Martoccio, Vice President, Chief Operating Officer stated, "The stations allow us to establish new protocols that proactively prevent infections to ensure the best outcomes for patients." They have experienced no slip and falls associated with the stations.

Jeffrey Miley, Pharm. D., CPh., Director of Pharmacy Services, AdventHealth Connerton stated: "To help improve our compliance with USP 797 and minimize the risk of pathogens contaminating our Clean room, we added to our department's action plan your PathO<sub>3</sub>Gen Solutions Footwear Sanitizing Station. The stations are now part of our process that each employee uses prior to entering our clean room. Our last Air and Surface samples were negative for any growth in both rooms. We will continue to utilize the PathO<sub>3</sub>Gen Solutions Footwear Sanitizing Station in our Ante room because the more tools we have to minimize risk for our patients helps us provide safer patient care."

For more information, visit [www.patho3gen.com](http://www.patho3gen.com).

There are multiple studies that show the value in utilizing a footwear sanitizing station within a facility.

- An independent study of a Tampa hospital was done in 2017 by My Lien Dao, Ph.D., Associate Professor at the University of South Florida. The results showed a 99.59% reduction in MRSA and a 97.5% reduction in C.diff after stepping on the unit for 8 seconds. The study can be found here: [https://www.patho3gen.com/wp-content/uploads/Dao\\_Final-Report-on-GEM-SSD-at-Hospital\\_9-3-2017-.pdf](https://www.patho3gen.com/wp-content/uploads/Dao_Final-Report-on-GEM-SSD-at-Hospital_9-3-2017-.pdf)
- In August 2019 a study was conducted by NSF Labs International showing kill rates at 6, 8 and 10 seconds of Ozone + UVC exposure. Below are the following percentage and log reduction results at 10 seconds:

Type of Pathogen	Pathogen Reduction at 10 Seconds	Log Reduction at 10 Seconds
<i>Candida auris</i>	99.9993%	5.16
<i>Escherichia coli</i> (ESBL)	99.9989%	4.96
<i>Klebsiella pneumoniae</i> (CRE)	99.9986%	4.86
<i>Pseudomonas aeruginosa</i> (MDRO)	99.9970%	4.53
Methicillin resistant staphylococcus aureus (MRSA)	99.9969%	4.51
<i>Clostridioides difficile</i> (C. diff)	99.9960%	4.40
<i>Enterococcus faecalis</i> (VRE)	99.9863%	3.86

- CREM Co. Labs, Ontario, Canada, conducted an independent study “Assessment of PathO3Gen Solutions Footwear Sanitizing Station for Decontaminating Hard, Non-Porous Environmental Surfaces (Shoes)” testing Coronavirus 229E (ATCC VR-740) - Human Coronavirus the EPA recommend surrogate standard for testing products to combat COVID-19. They issued a final report on March 20, 2020.

The initial challenge on each carrier in Test 1 was 3.68 log 10. The PathO3Gen Solutions’ Footwear Sanitizing Station achieved the maximum attainable result of 3.68 log 10 at both 8 and 10 seconds, leaving behind zero plaque. Similarly, the initial challenge on each carrier in Test 2 was 3.73 log 10, and the PathO3Gen Solutions FSS also achieved the maximum attainable result at both 8 and 10 seconds leaving zero plaque behind. Lastly, the initial challenge on each carrier in Test 3 was 3.65 log 10, and the FSS also achieved the maximum attainable result at both 8 and 10 seconds leaving zero plaque behind.

Overall, the results were as follows:

6 seconds: 1 PFU remaining (PFU = Plaque forming unit = pathogen)

8 seconds: 0 PFU remaining

10 seconds: 0 PFU remaining

#### **Concluding statement**

“The PathO3Gen Solutions’ Footwear Sanitizing Station left 0 Human Coronavirus residue on the bottom of footwear, in 8 seconds.”

- In the scientific article, “Evaluation of Hospital Floors as a Potential Source of Pathogen Dissemination Using a Nonpathogenic Virus as a Surrogate Marker”, (Koganti, Donskey et al) a blinded study approved by the Cleveland Veterans Administration Hospital, demonstrated that a nonpathogenic virus inoculated onto floors in hospital rooms disseminated rapidly to the hands of patients and to high-touch surfaces inside and outside the patient rooms as well as on portable equipment.

<https://pdfs.semanticscholar.org/2748/bc5bf40f2215e5bf1772f368b13225b868ac.pdf>



**NSF International – Applied Research Center**  
789 N. Dixboro Rd. Ann Arbor, MI 48015, USA  
1-800.NSF.MARK | +1-734.769.8010 | [www.nsf.org](http://www.nsf.org)

**Send to:** Scott Beal  
Hepco Medical, LLC  
200 Central Ave Ste 2200  
St. Petersburg, FL 33701

---

**Result: COMPLETE**

**Report Date: August 27, 2019**

---

Customer Name: Hepco Medical, LLC  
Description: Efficacy of an Ozone-Generating Whole-Shoe Disinfection Device at Three Time Points  
Test Type: Test Only  
Job Number: J-00340388 Revised  
Project Number: 10120011  
NSF Corporate: C0484938  
Project Manager: S. Hatt

---

**Executive Summary:** An efficacy study was performed using a UV-C and ozone-generating device against *Escherichia coli* (ESBL), *Pseudomonas aeruginosa*, Methicillin-resistant *Staphylococcus aureus*, Vancomycin-resistant *Enterococcus faecalis*, Carbapenem-resistant *Klebsiella pneumoniae*, *Candida auris*, *Aspergillus brasiliensis*, and *Clostridioides difficile*. Log and percent reduction were quantified for each microorganism at three exposure times: 6, 8, and 10 seconds.

**Thank you for having your product tested by NSF International.**

Please contact your Project Manager if you have any questions or concerns pertaining to this report.

**Report Authorization:** \_\_\_\_\_

A handwritten signature in blue ink that reads 'Jesse D. Miller'.

Jesse Miller – Director, Applied Research Center

## Experimental Summary:

### Challenge microorganisms:

- Extended spectrum beta-lactamase (ESBL) *Escherichia coli* ATCC BAA-196
- *Pseudomonas aeruginosa* ATCC BAA- 2108
- Methicillin-resistant *Staphylococcus aureus* (MRSA) ATCC 33592
- Vancomycin-resistant *Enterococcus faecalis* (VRE) ATCC 51299
- Carbapenem-resistant *Klebsiella pneumoniae* (CRE) ATCC BAA-1705
- *Candida auris* CDC B11903
- *Aspergillus brasiliensis* ATCC 16404
- *Clostridioides difficile* ATCC 43598

### Test Product:

- PathO<sub>3</sub>Gen Solutions™ Footwear Sanitizing Station

### Culture Preparation:

- Methicillin-resistant *Staphylococcus aureus* (MRSA), Vancomycin-resistant *Enterococcus faecalis* (VRE), *Klebsiella pneumoniae* (CRE), and *Escherichia coli* (ESBL) were propagated onto Tryptic Soy Agar with 5% Sheep Blood (SBA) and were incubated at 35 ± 2°C for 24 ± 2 hours.
- *Candida auris* was propagated onto SBA for 18-24 hours at 25 ± 1°C.
  - Daily transfers were performed using Sabouraud Dextrose Agar with Lethen (SDA/L). Each daily transfer was incubated at the appropriate temperature for growth for 24 ± 2 hours.
  - After incubation, an isolated colony was picked to SDA/L and incubated at 35 ± 2°C for 24 ± 2 hours.
- *Aspergillus brasiliensis* was propagated on SDA/L for 5 to 7 days. After incubation, the culture was washed with 0.85% saline with tween and filtered with through sterile gauze. The culture was centrifuged at 4,500 rpm, the supernatant removed, and the pellet was rehydrated with Phosphate Buffered Saline (PBS).
- *Clostridium difficile* spore suspension was prepared using a modification of the U.S. EPA OPP: MB-28 (December 2017) Procedure for the Production and Storage of Spores of *Clostridium difficile* for Use in the Efficacy Evaluation of Antimicrobial Agents based on ASTM Standard E2839-11.

### Inoculation:

- Hard rubber carriers of approximately 2” x 2” were sterilized prior to testing.
- The soles of the shoe carriers were inoculated with 0.1 mL aliquot of standardized suspension of the challenge microorganism and allowed to dry for 60 ± 5 minutes.

### Exposure Period:

- The disinfection device was sterilized using isopropyl alcohol prior to testing.
- After drying, the sole of the shoe carrier was aseptically placed inoculum side down onto the floor disinfection device using sterilized forceps.
- A volunteer (~150 lb) stood on the shoe carrier (with a sterile barrier between the individual and shoe carrier) for the exposure time. The instrument automatically shut off after the exposure time.
- After the exposure time, the shoe carrier was moved to a saline solution using sterile forceps. Three carriers were tested per each microorganism.
  - For bacteria, dilutions were plated via pour plate method in duplicate on Microbial Content Test Agar and incubated for 48 ± 3 hours at 35 ± 2 °C
  - For fungi, dilutions were plated via pour plate method in duplicate on Sabouraud Dextrose Agar with Lethen and incubated for 5 to 7 days at 25 ± 2 °C
  - For spores, dilutions were plated via spread plate method in duplicate on Brucella Blood Agar and incubated for 48 ± 3 hours at 36 ± 2 °C.
- After incubation, colonies were counted, and data recorded. Geometric mean was calculated from the duplicated plates and log and percent reduction were calculated using the positive control counts.

NSF International – Applied Research Center  
789 N. Dixboro Rd. Ann Arbor, MI 48015, USA  
1-800.NSF.MARK | +1-734.769.8010 | www.nsf.org

## TEST REPORT

**Table 1.** Geometric mean of the inoculum concentrations on unexposed carriers used for each microorganism. The results shown are the geomean of the inoculum plated in triplicate.

Organism	Time Point	CFU/mL	Log (CFU/mL)
ESBL <i>E. coli</i> ATCC BAA-196	6 seconds	3.03E+07	7.4814
	8 seconds	5.90E+07	7.7706
	10 seconds	3.26E+07	7.5129
<i>Pseudomonas aeruginosa</i> ATCC BAA- 2108	6 seconds	1.52E+06	6.1829
	8 seconds	2.21E+06	6.3439
	10 seconds	1.60E+06	6.2037
Methicillin-resistant <i>Staphylococcus aureus</i> (MRSA) ATCC 33592	6 seconds	2.79E+07	7.4461
	8 seconds	4.36E+07	7.6398
	10 seconds	4.01E+07	7.6030
Vancomycin- resistant <i>Enterococcus faecalis</i> (VRE)	6 seconds	7.12E+07	7.8528
	8 seconds	7.40E+07	7.8690
	10 seconds	4.64E+07	7.6664
<i>Klebsiella pneumoniae</i> CRE ATCC BAA-1705	6 seconds	1.97E+08	8.2944
	8 seconds	3.36E+08	8.5262
	10 seconds	2.69E+08	8.4302
<i>Candida auris</i> CDC B11903	6 seconds	5.16E+06	6.7129
	8 seconds	1.32E+06	6.1219
	10 seconds	1.86E+06	6.2692
<i>Aspergillus brasiliensis</i> ATCC 16404	6 seconds	6.70E+06	6.8261
	8 seconds	8.41E+06	6.9246
	10 seconds	1.39E+07	7.1438
<i>Clostridioides difficile</i> ATCC 43598	6 seconds	1.15E+07	7.0614
	8 seconds	1.37E+07	7.1380
	10 seconds	1.24E+07	7.0927

## TEST REPORT

**Table 2.** Carrier density for each of the carriers inoculated with ESBL *E. coli* and exposed to the disinfection device. The results shown are the geomean of each of the carriers, which were plated in triplicate.

Organism	Time Point	Replicate A (CFU/mL)	Replicate B (CFU/mL)	Replicate C (CFU/mL)	Geomean (CFU/mL)	Log CFU/mL	Percent Reduction	Log Reduction
ESBL <i>E. coli</i> ATCC BAA-196	6 seconds	3.96E+05	3.59E+05	1.29E+05	2.64E+05	5.4211	99.1297%	2.06
	8 seconds	2.95E+04	4.14E+04	3.51E+03	1.62E+04	4.2107	99.9725%	3.56
	10 seconds	1.23E+02	4.11E+02	9.23E+02	3.60E+02	2.5563	99.9989%	4.96

**Table 3.** Carrier density for each of the carriers inoculated with *Pseudomonas aeruginosa* and exposed to the disinfection device. The results shown are the geomean of each of the carriers, which were plated in triplicate.

Organism	Time Point	Replicate A (CFU/mL)	Replicate B (CFU/mL)	Replicate C (CFU/mL)	Geomean (CFU/mL)	Log CFU/mL	Percent Reduction	Log Reduction
<i>Pseudomonas aeruginosa</i> ATCC BAA- 2108	6 seconds	1.89E+03	2.84E+03	3.29E+03	2.60E+03	3.4157	99.8287%	2.77
	8 seconds	4.32E+01	5.15E+01	6.53E+01	5.26E+01	1.7207	99.9976%	4.62
	10 seconds	5.90E+01	6.39E+01	2.82E+01	4.74E+01	1.6755	99.9970%	4.53

**Table 4.** Carrier density for each of the carriers inoculated with MRSA and exposed to the disinfection device. The results shown are the geomean of each of the carriers, which were plated in triplicate.

Organism	Time Point	Replicate A (CFU/mL)	Replicate B (CFU/mL)	Replicate C (CFU/mL)	Geomean (CFU/mL)	Log CFU/mL	Percent Reduction	Log Reduction
Methicillin Resistant <i>Staphylococcus aureus</i> (MRSA) ATCC 33592	6 seconds	2.73E+04	5.25E+04	3.75E+04	3.77E+04	4.5768	99.8647%	2.87
	8 seconds	4.90E+03	5.78E+03	1.15E+04	6.88E+03	3.8376	99.9842%	3.80
	10 seconds	5.18E+02	1.15E+03	3.30E+03	1.25E+03	3.0978	99.9969%	4.51

**Table 5.** Carrier density for each of the carriers inoculated with VRE and exposed to the disinfection device. The results shown are the geomean of each of the carriers, which were plated in triplicate.

Organism	Time Point	Replicate A (CFU/mL)	Replicate B (CFU/mL)	Replicate C (CFU/mL)	Geomean (CFU/mL)	Log CFU/mL	Percent Reduction	Log Reduction
<i>Enterococcus faecalis</i> VRE ATCC 51299	6 seconds	1.08E+06	1.16E+06	8.14E+05	1.01E+06	6.0028	98.5863%	1.85
	8 seconds	5.83E+03	1.28E+04	1.29E+04	9.87E+03	3.9945	99.9867%	3.87
	10 seconds	7.62E+03	5.88E+03	5.77E+03	6.37E+03	3.8042	99.9863%	3.86



## TEST REPORT

**Table 6.** Carrier density for each of the carriers inoculated with CRE and exposed to the disinfection device. The results shown are the geomean of each of the carriers, which were plated in triplicate.

Organism	Time Point	Replicate A (CFU/mL)	Replicate B (CFU/mL)	Replicate C (CFU/mL)	Geomean (CFU/mL)	Log CFU/mL	Percent Reduction	Log Reduction
<i>Klebsiella pneumoniae</i> CRE ATCC BAA-1705	6 seconds	7.26E+05	3.86E+05	1.29E+06	7.12E+05	5.8527	99.6384%	2.44
	8 seconds	8.75E+04	1.20E+05	2.72E+05	1.42E+05	5.1519	99.9578%	3.37
	10 seconds	3.91E+03	1.32E+03	9.85E+03	3.70E+03	3.5687	99.9986%	4.86

**Table 7.** Carrier density for each of the carriers inoculated with *Candida auris* and exposed to the disinfection device. The results shown are the geomean of each of the carriers, which were plated in triplicate. For plate count geomeans below 10 CFU/mL were input as 10 to calculate percent and log reduction.

Organism	Time Point	Replicate A (CFU/mL)	Replicate B (CFU/mL)	Replicate C (CFU/mL)	Geomean (CFU/mL)	Log CFU/mL	Percent Reduction	Log Reduction
<i>Candida auris</i> CDC B11903	6 seconds	1.09E+03	1.82E+02	6.08E+02	4.94E+02	2.6938	99.9904%	4.02
	8 seconds	1.46E+02	<1.00E+01	2.93E+01	3.50E+01	1.5437	99.9974%	4.58
	10 seconds	2.11E+01	<1.00E+01	<1.00E+01	1.28E+01	1.1081	99.9993%	5.16

**Table 8.** Carrier density for each of the carriers inoculated with *Aspergillus brasiliensis* and exposed to the disinfection device. The results shown are the geomean of each of the carriers, which were plated in triplicate.

Organism	Time Point	Replicate A (CFU/mL)	Replicate B (CFU/mL)	Replicate C (CFU/mL)	Geomean (CFU/mL)	Log CFU/mL	Percent Reduction	Log Reduction
<i>Aspergillus brasiliensis</i> ATCC 16404	6 seconds	1.18E+06	1.13E+06	1.08E+06	1.13E+06	6.0528	83.1453%	0.77
	8 seconds	5.29E+05	1.00E+06	1.16E+06	8.50E+05	5.9293	89.8956%	1.00
	10 seconds	3.69E+05	1.25E+06	3.26E+05	5.32E+05	5.7257	96.1744%	1.42

**Table 9.** Carrier density for each of the carriers inoculated with *C. difficile* and exposed to the disinfection device. The results shown are the geomean of each of the carriers, which were plated in triplicate.

Organism	Time Point	Replicate A (CFU/mL)	Replicate B (CFU/mL)	Replicate C (CFU/mL)	Geomean (CFU/mL)	Log CFU/mL	Percent Reduction	Log Reduction
<i>Clostridioides difficile</i> ATCC 43598	6 seconds	1.21E+05	8.61E+04	1.87E+05	1.25E+05	5.0965	98.9140%	1.96
	8 seconds	9.65E+03	9.62E+03	4.86E+03	7.67E+03	3.8848	99.9440%	3.25
	10 seconds	2.26E+03	1.47E+03	3.63E+01	4.94E+02	2.6938	99.9960%	4.40

NSF International – Applied Research Center  
789 N. Dixboro Rd. Ann Arbor, MI 48015, USA  
1-800.NSF.MARK | +1-734.769.8010 | www.nsf.org

## TEST REPORT









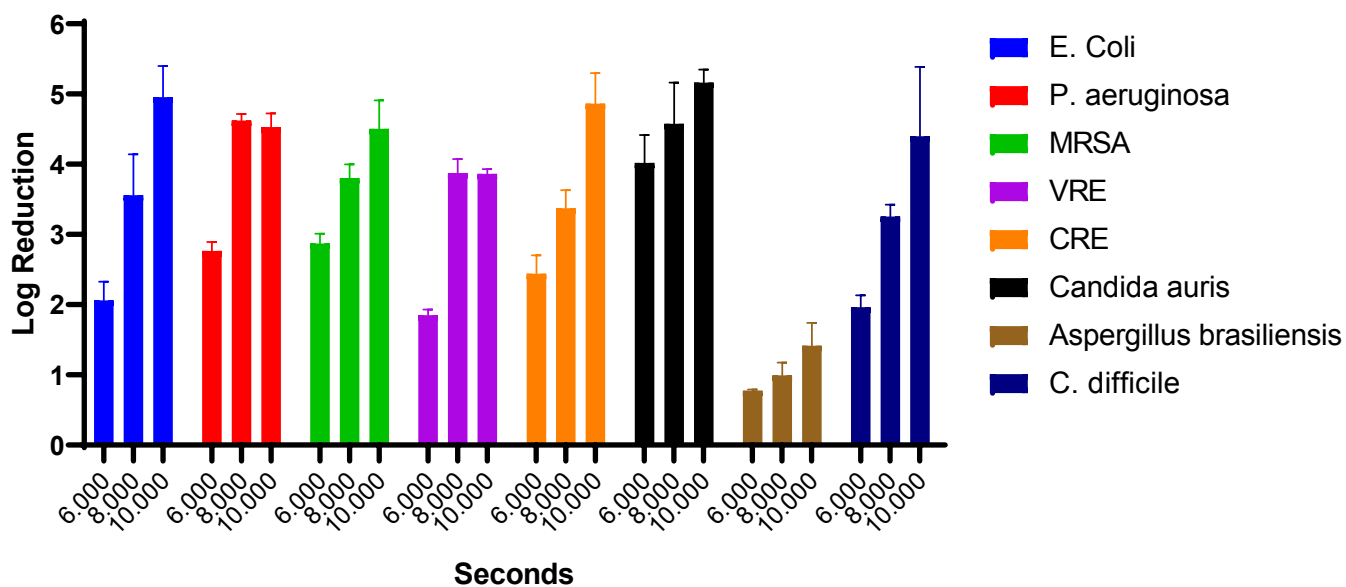


Figure 1. Summary bar plot of mean log reduction at each time point (in seconds) by microorganism tested.

NSF International – Applied Research Center  
 789 N. Dixboro Rd. Ann Arbor, MI 48015, USA  
 1-800.NSF.MARK | +1-734.769.8010 | www.nsf.org

# TEST REPORT

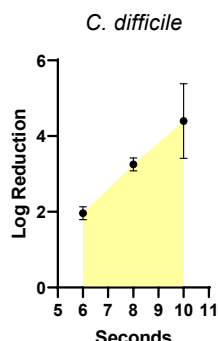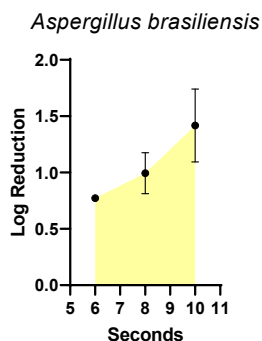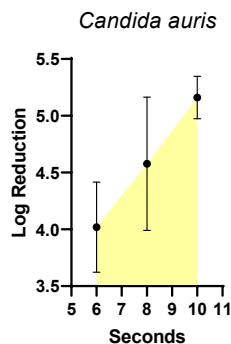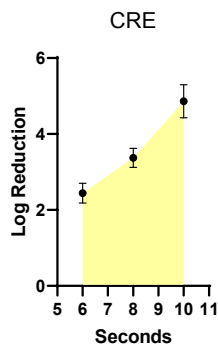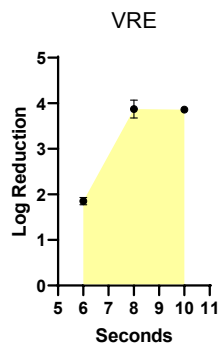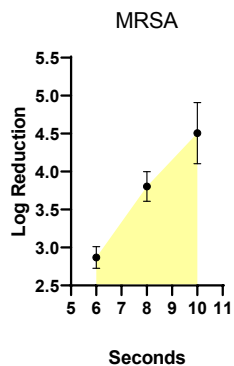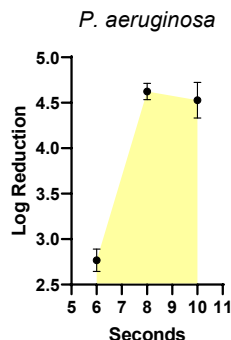

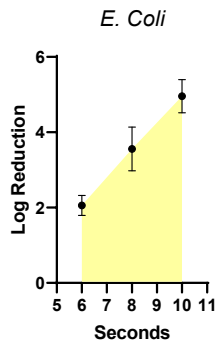

NSF International – Applied Research Center  
 789 N. Dixboro Rd. Ann Arbor, MI 48015, USA  
 1-800.NSF.MARK | +1-734.769.8010 | [www.nsf.org](http://www.nsf.org)

**Table 10.** Linear regression analysis results assessing the relationship of log reduction by time. The slopes for each line are significantly different from zero.

	<i>E. Coli</i>	<i>P. aeruginosa</i>	MRSA	VRE	CRE	<i>Candida auris</i>	<i>Aspergillus brasiliensis</i>	<i>C. difficile</i>
<b>Best-fit values</b>								
Slope	0.7242	0.4403	0.409	0.5031	0.605	0.2854	0.1612	0.6087
Y-intercept	-2.268	0.4502	0.4534	-0.8288	-1.281	2.303	-0.2276	-1.664
X-intercept	3.132	-1.023	-1.109	1.647	2.117	-8.067	1.412	2.734
1/slope	1.381	2.271	2.445	1.988	1.653	3.503	6.204	1.643
<b>Std. Error</b>								
Slope	0.08503	0.1099	0.05277	0.1138	0.06902	0.0799	0.04195	0.111
Y-intercept	0.6942	0.8973	0.4309	0.929	0.5635	0.6524	0.3425	0.9065
<b>95% Confidence Intervals</b>								
Slope	0.5231 to 0.9253	0.1804 to 0.7002	0.2842 to 0.5338	0.2340 to 0.7721	0.4418 to 0.7682	0.09649 to 0.4744	0.06200 to 0.2604	0.3462 to 0.8712
Y-intercept	-3.910 to -0.6265	-1.672 to 2.572	-0.5654 to 1.472	-3.025 to 1.368	-2.613 to 0.05183	0.7600 to 3.845	-1.038 to 0.5822	-3.808 to 0.4792
X-intercept	1.187 to 4.264	-14.10 to 2.413	-5.151 to 1.065	-5.766 to 3.972	-0.1165 to 3.427	-39.58 to -1.613	-9.251 to 4.045	-1.366 to 4.428
<b>Goodness of Fit</b>								
R square	0.912	0.6963	0.8956	0.7364	0.9165	0.6458	0.6784	0.8111
Sy.x	0.4165	0.5384	0.2585	0.5574	0.3381	0.3914	0.2055	0.5439
<b>Is slope significantly non-zero?</b>								
F	72.54	16.05	60.08	19.55	76.83	12.76	14.77	30.06
DFn, DFd	1, 7	1, 7	1, 7	1, 7	1, 7	1, 7	1, 7	1, 7
P value	<0.0001	0.0051	0.0001	0.0031	<0.0001	0.0091	0.0064	0.0009
Deviation from zero?	Significant	Significant	Significant	Significant	Significant	Significant	Significant	Significant
<b>Equation</b>	Y = 0.7242*X - 2.268	Y = 0.4403*X + 0.4502	Y = 0.4090*X + 0.4534	Y = 0.5031*X - 0.8288	Y = 0.6050*X - 1.281	Y = 0.2854*X + 2.303	Y = 0.1612*X - 0.2276	Y = 0.6087*X - 1.664









J-00340388\_1 Rev

Page 9 of 11

Written NSF approval is required for reproduction of this report. Only authorized reports in their entirety may be distributed. This report does not represent authorization to use the NSF Mark. NSF Certification may be confirmed at [www.nsf.org](http://www.nsf.org). The results of this report relate only to those items tested.



NSF International – Applied Research Center  
 789 N. Dixboro Rd. Ann Arbor, MI 48015, USA  
 1-800.NSF.MARK | +1-734.769.8010 | [www.nsf.org](http://www.nsf.org)

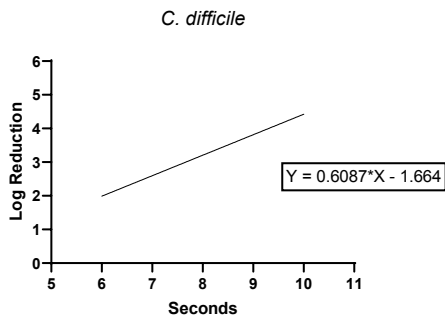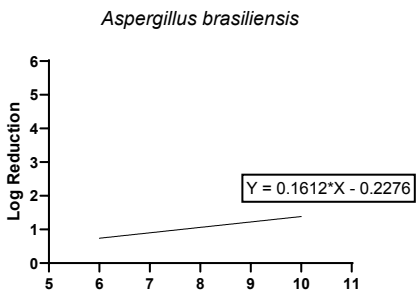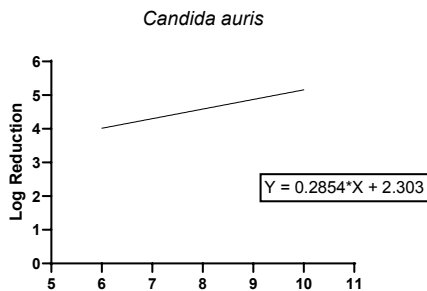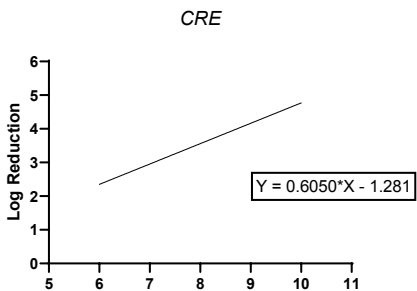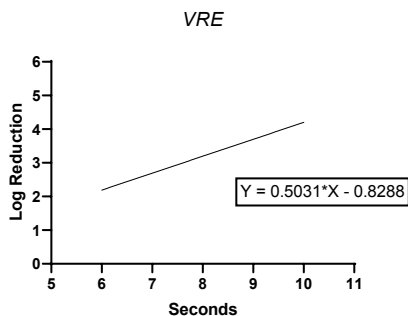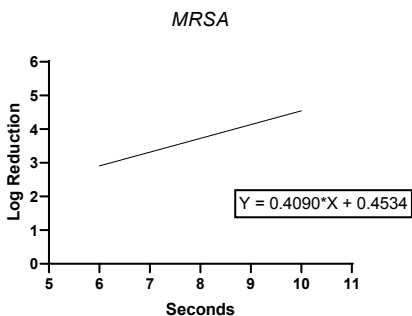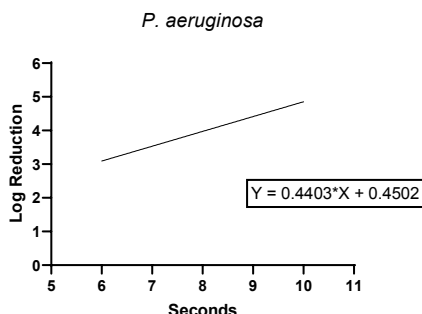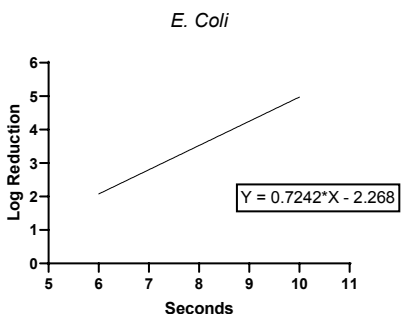

NSF International – Applied Research Center  
789 N. Dixboro Rd. Ann Arbor, MI 48015, USA  
1-800.NSF.MARK | +1-734.769.8010 | www.nsf.org

## TEST REPORT

### Testing Laboratories:

**All work performed at:**

**Lab ID**

Approved Subcontract

**Note**

GLP, non-GLP compliant

